



PC with installed Ampere BGM Software is optional. PC not required during operation. Network switch is optional. Network switch is required to connect multiple zones. Quantity of Ampere PR3535 (BGM/Paging Clients) may be used a single or multiple, subject to requirement. Connections for Amplifier Changeover is illustration only, please refer to Manual for actual configurations.

Disclaimer :
 The above is an illustration of possible configuration for this category. Ampere is not liable for any claim or whatsoever for errors or omissions.
 Network switch is optional. Network switch is required to connect multiple zones.
 Quantity of Ampere PR3535 (BGM/Paging Clients) may be used a single or multiple, subject to requirement.
 Connections for Amplifier Changeover is illustration only, please refer to Manual for actual configurations.
 PC with installed Ampere BGM Software is optional. PC not required during operation.
 Network switch is optional. Network switch is required to connect multiple zones.
 Quantity of Ampere PR3535 (BGM/Paging Clients) may be used a single or multiple, subject to requirement.
 Connections for Amplifier Changeover is illustration only, please refer to Manual for actual configurations.